

# Wulff Enterprises

07/29/2010

## OH Inventory for Sale

Page:1

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
Canon LC 710	156509	5	E()	
Canon LC 710	156507	9	E()	
Canon LC 710	156506	24	E()	
Canon LC 710	156511	31	E()	
Canon LC 9000L	157188	N/A		Missing original exit tray; offcolor panels
Canon LC 9000L	157186	N/A		Missing original exit tray; offcolor panels
Imagistics FX2100	151191	26		Very dirty & offcolor panels
Imagistics FX2100	151192	23		Very dirty & offcolor panels
Imagistics FX2100	154936	66		Has NIC & PFU
Imagistics FX2100	154392	13		
Imagistics FX2100	147844	96		
Imagistics FX2100	147843	80		
KonicaMinolta 2900	131079	10	PFU() E()	Broken exit tray
KonicaMinolta 2900	126169	10	PFU()	Paper tray broken at pegs; missing receiving tray
KonicaMinolta 2900	131080	8	PFU() E()	Broken exit tray
KonicaMinolta 2900	146157	6	PFU() E()	Missing toner cartridge- can't test
KonicaMinolta 2900	152500	25	E()	Feed tray broken & feed board out of alignment- can't test; broken receiving tray
KonicaMinolta 2900	152764	24		Missing toner cartridge- can't test
KonicaMinolta 2900	153249	51	PFU()	Broken original exit tray
KonicaMinolta 2900	152740	15	E()	Paper tray base broken off; drum flip plate on imaging unit broken- can't test
KonicaMinolta 2900	153251	20	PFU() E()	Broken paper tray hooks
KonicaMinolta 3900	151698	6	PFU() E()	Broken feed tray
Minolta 3800	143153	N/A	PFU() E()	Shows a false jam in feeder- can;t test; offcolor panels
Minolta 3800	139528	3	PFU() E()	Deep scratches in control panel
Muratec F-110	150835	6	E()	
Muratec F-320	150542	N/A	E()	
Muratec MFX-1300	152122	11	E()	Offcolor panels

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
Konica 9880	128372		8 E()	
Konica 9980	108141		11 PFU() E()	
Panasonic DP-190	153978		87	
Panasonic DP-190	151365		31	
Panasonic DP-190	153977		66	Make a loud grinding noise when running- scanner will not move
Panasonic DP-190	154269		98	Missing rear paper tray cover
Panasonic DP-190	154187		44	
Panasonic DP-190	154271		113	
Panasonic DP-190	153984		55	
Panasonic DP-190	153979		53	
Panasonic DP-190	154908		N/A PFU()	Has stand
Panasonic DP-190	154272		173	Missing back paper tray cover
Panasonic DP-190	154265		73	Missing rear paper tray cover
Panasonic DP-190	154262		105	
Panasonic DP-190	155232		114	
Panasonic DP-190	153974		112	Error code E01-31 (scanner is sticking); did run a report; deep scratches in glass; yellowed panels
Panasonic DP-190	153980		82	
Panasonic DP-190	153975		23	
Panasonic DP-190	154260		39	
Panasonic DP-190	154263		25	Missing rear paper tray cover
Panasonic DP-190	154264		35	
Panasonic DP-190	154261		39	Missing rear paper tray cover
Panasonic DP-190	154258		30	Missing rear paper tray cover
Panasonic DP-190	154268		35	Missing rear paper tray cover
Panasonic DP-190	154259		40	Missing rear paper tray cover
Panasonic DP-190	156097		72	
Panasonic DP-190	153549		N/A	Missing toner cartridge- can't test
Panasonic UF-790	151110		118 E()	
Mita KM-F650	153889		N/A E()	Top feeder access panel broken at hinges- can't test; broken back top left corner panel; offcolor & dirty panels
Mita KM-F650	151282		N/A E()	Top and right side panels broken- can't test machine; print port bent in
Panasonic UF-8000	156103		87 PFU()	
Panasonic UF-8000	157051		51	
Panasonic UF-8000	147094		30	

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
Panasonic UF-8000	155656		77 PFU()	
Kyocera KM-F1060	148460		3	
Kyocera KM-F1060	148461		12	
Kyocera KM-F1060	148463		4	
Mita KM-F1050	148477	N/A		Broken start button- can't test; broken exit tray
Panasonic UF-9000	155308		28	
Panasonic UF-9000	148570		30	
Panasonic UF-9000	148683		140	Offcolor panels
Panasonic UF-9000	148708		40	Broken front door; offcolor panels; missing rear paper tray cover
Panasonic UF-9000	148442		163	Offcolor panels
Panasonic UF-9000	150130		1	
Panasonic UF-9000	156386		76	
Panasonic UF-9000	148775		252	Offcolor panels; missing rear paper tray cover
Panasonic UF-9000	148569		69	Offcolor panels
Panasonic UF-9000	148561		120	Fuser rollers not turing causing machine to jam every try- can't test; makes a knocking noise
Ricoh 2210 L	157246		12 PFU()	
Gestetner F270	157257		5	
Ricoh 3310 L	152193		32 E()	
Ricoh 3310 L	152195		88 E()	
Ricoh 3310 L	152194		12 E()	Yellowed panels
Ricoh 3310 LE	153867		1	
Ricoh 3310 LE	157281		15	
Lanier LF311	153961		94	Front control panel out of alignment; dirty & yellowed panels
Ricoh 3320 L	153705		28	
Ricoh 4410 NF	155526		8	
Ricoh 4420 L	154786		16	
Ricoh 4420 L	154784		3	Top paper tray will not open
Ricoh 4420 L	154785		3	
Ricoh 4420 L	154783		4	
Ricoh 4420 L	149691		12	
Ricoh 4420 NF	156500		51	Off color panels; dirty
Savin 3760NF	151124		9	False jam in finisher - not tested; toner spilled in machine

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
Lanier LF417E	150685	45		Broken feed tray
Ricoh 5510 NF	156516	25 PFU()	E()	
Ricoh 5510 NF	156515	N/A PFU()	E()	
Sharp FO-4470	157180	34		
Sharp FO-4470	157181	40		Missing drum cartridge & toner cartridge-- tested with others
Sharp FO-DC525	153893	193		
Sharp FO-DC535	156102	1 E()		Offcolor & dirty panels
Sharp FO-DC535	155388	1 E()		Missing imaging unit & toner cartridge- tested with others
Sharp FO-DC535	155167	2 E()		Jams every try- can't test
Sharp FO-DC535	155166	2 E()		Missing original exit tray
Sharp FO-DC535	155168	5 E()		
Sharp FO-DC535	155165	4 E()		
Sharp FO-DC535	155169	4 E()		
Sharp FO-DC535	155164	4 E()		Missing receiving tray
Sharp FO-DC535	155158	6 E()		Missing drum & toner cartridges- tested with others
Sharp FO-DC535	155157	2 E()		
Sharp FO-DC535	155161	N/A		Showing call for service HSYNC- can't test; missing exit trays
Sharp FO-DC535	155170	1 E()		Jams from both paper trays; scratched display
Sharp FO-DC535	155162	3		Missing exit trays
Sharp FO-DC535	155174	7 E()		Missing top paper tray exit cover
Sharp FO-DC535	155172	9 E()		
Sharp FO-DC535	155183	7		Broken control panel mounts; broken exit tray
Sharp FO-DC535	155182	8 E()		Squeaking noise when running
Sharp FO-DC535	155184	3 E()		
Sharp FO-DC535	155180	3 E()		Yellowed panels
Sharp FO-DC535	155185	4 E()		Screw through exit tray to hold it
Sharp FO-DC535	155179	N/A E()		Control panel broken off- can't test
Sharp FO-DC535	155176	5 E()		
Sharp FO-DC535	155175	2 E()		Yellowed panels
Sharp FO-DC535	155177	9 E()		Missing toner cartridge- tested with another
Sharp FO-DC535	155156	3 E()		
Sharp FO-DC535	155178	2 E()		

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
Sharp FO-DC535	155154	3	E()	Scratched display
Sharp FO-DC535	155155	7	E()	
Sharp FO-DC535	155115	4	E()	Missing toner cartridge- tested with another
Sharp FO-DC535	155114	3	E()	Missing original exit tray
Sharp FO-DC535	155116	2		Missing all exit trays
Sharp FO-DC535	155113	4	E()	Missing imaging unit & developer unit- tested with another
Sharp FO-DC535	155117	6	E()	
Sharp FO-DC535	155112	2	E()	Missing imaging unit- tested with another
Sharp FO-DC535	155108	15	E()	
Sharp FO-DC535	155107	2	E()	
Sharp FO-DC535	155110	3	E()	Imaging unit cover broken off (tested with another)
Sharp FO-DC535	155118	4		Missing exit tray
Sharp FO-DC535	155111	4	E()	Missing imaging unit- tested with another
Sharp FO-DC535	155125	3	E()	Missing imaging unit- tested with another; missing original exit tray
Sharp FO-DC535	155119	4		Jams every try from upper paper tray; missing original exit tray; screw through front side exit tray to hold it in place
Sharp FO-DC535	155151	N/A	E()	Machine will not come to ready- can't test; missing receiving tray
Sharp FO-DC535	155149	N/A	E()	Control panel flashing on & off- can't test
Sharp FO-DC535	155152	3	E()	Jams out of both paper trays- can't test
Sharp FO-DC535	155147	1	E()	Missing drum cartridge- tested with another
Sharp FO-DC535	155153	1	E()	Jams from both paper trays- can't test; missing receiving tray
Sharp FO-DC535	155130	1	E()	Missing imaging unit- tested with another
Sharp FO-DC535	155127	2	E()	Missing original exit tray
Sharp FO-DC535	155126	4	E()	
Sharp FO-DC535	155128	4	E()	
Sharp FO-DC535	155186	N/A	E()	Will not come out of warmup- can't test
Sharp FO-DC535	155129	7	E()	Missing imaging unit & developer unit-

Manufacturer/Model#	CTRL #	Meter	Accessories	Comments
				tested with another; screw through exit tray to hold it in place
Sharp FO-DC535	155148	1 E()		
Sharp FO-DC535	155389	5 E()		Yellowed panels
Sharp FO-DC535	155391	5 E()		
Sharp FO-DC535	155390	2 E()		Cracked back panel
Sharp FO-DC535	155392	3 E()		Missing original exit tray
Sharp FO-DC535	155393	2 E()		Broken original exit tray mount
Sharp FO-DC550	156587	11		
Sharp FO-DC550	147315	45 E()		Very dirty
Toshiba DP120F	153935	N/A		Missing exit trays; off color panels; missing imaging unit
Toshiba DP85F	153936	N/A		Missing all exit trays; No imaging unit - not tested; missing bypass cover; off color panels
Toshiba DP85F	151004	130 E()		Yellowed panels
Toshiba DP85F	150750	109		Yellowed panels
Toshiba DP85F	150753	155 E()		Yellowed panels
Toshiba E-STUDIO170F	139159	142		Broken paper tray at pivot pins
Toshiba E-STUDIO170F	143686	106		Control panel out of alignment; paper tray broken & missing rear cover; offcolor panels; missing power cord
Toshiba E-STUDIO170F	153601	159 PFU(MY1025)		
Toshiba E-STUDIO170F	151053	60		Missing paper tray cover
Toshiba E-STUDIO170F	151367	162		Broken paper tray at hinges
Toshiba E-STUDIO170F	151368	83		Broken paper tray at hinges; broken exit tray mounts
Toshiba E-STUDIO190F	151057	25		
Toshiba E-STUDIO190F	151059	14		
Toshiba E-STUDIO190F	151055	10		
Toshiba E-STUDIO190F	151056	34		
Toshiba E-STUDIO190F	149507	30		Offcolor panels
Xerox F12	156616	53		
Xerox FAX 2218	150902	3		

We maintain a constantly changing inventory of over 4000 used copiers, faxes and duplicators. While we make every effort to keep this list as current as possible, the list you are viewing may have already changed. Please call our sales team for current availability.